


## RF Technologies Folded Dipole Mounting Instructions

This document describes the correct mounting procedure for you antenna. Please ensure that you follow the points below to ensure the antenna performs to it's specifications and remains water resistant for the duration of it's use.

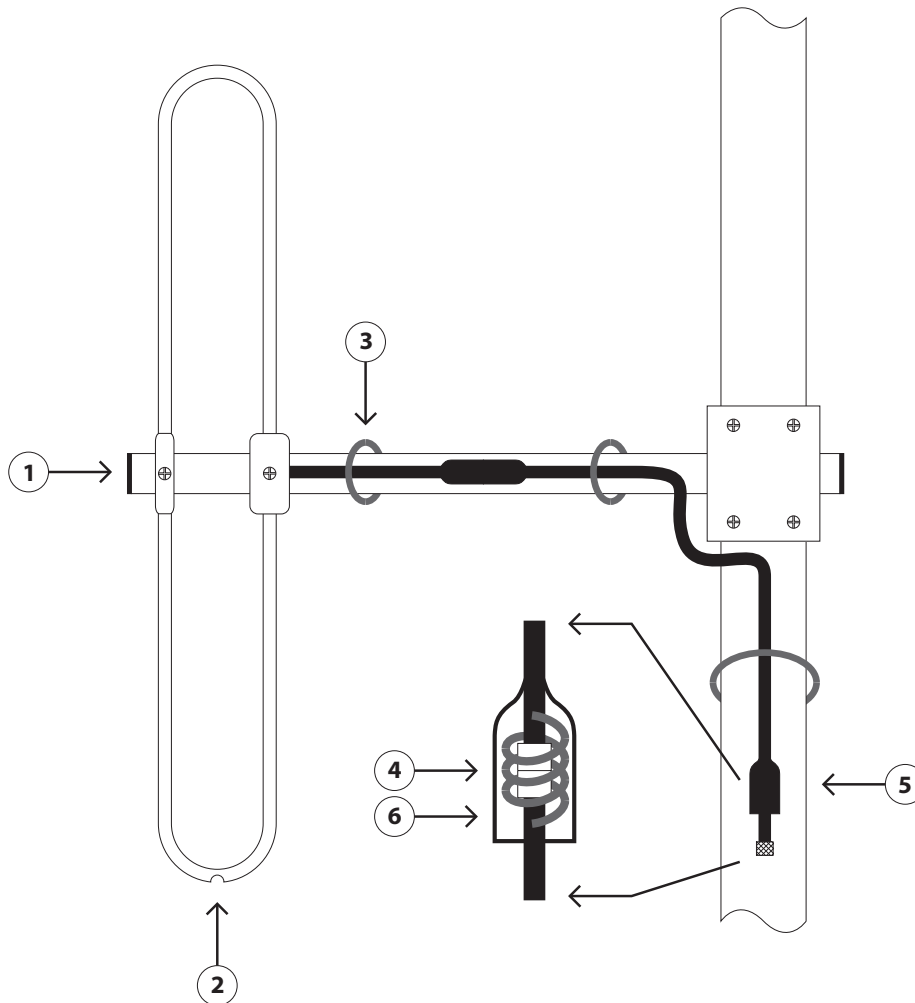

- 1) The antenna should be mounted with the boom arm parallel to the horizon, and the antenna vertical.
- 2) The antenna's drain hole must be mounted facing downwards.
- 3) The antenna's cable should be secured to the boom arm and mast.
- 4) Once connected the male N-type on the end of the antenna's cable should be sealed with self amalgamating rubber tape.
- 5) The antenna cable should be mounted vertically to encourage rainwater to drain over the rubber boot.
- 6) The rubber boot should be slid over the sealed connector. The bottom should be left open to allow excess water to drain away.